# TANBead® Nucleic Acid Extraction Kit



Viral Auto Plate

(for use with the SLA-16/32 and SLA-E132 Series)



**REF** 635A46

#### 1. Purpose

TANBead® Nucleic Acid Extraction Kit (REF 635A46) are suitable for isolating a variety of viral nucleic acids, including intestinal virus, Japanese encephalitis virus, dengue virus, avian influenza virus and EB virus. Compared to conventional methods, these kits are with simplified procedure. It takes only 200 µl of serum by Proteinase K treatment, followed by transferring to the pre-filled 96-well plate. Subsequently, extraction processes are automated through TANBead<sup>®</sup> Nucleic Acid Extractor (SLA-16/32, SLA-E132 Series) by binding of nucleic acids to the beads, washing and elution. The final product is of excellent quality with no contamination of proteins, nucleases, and inhibitors. It can be directly processed to next experiments, such as polymerase chain reaction (PCR), real-time polymerase chain reaction (Real-Time PCR) and reverse transcription polymerase chain reaction (RT-PCR), etc. This kit is suitable for clinical research and inspection units.

<u>Principle:</u> The silicon dioxide layer coated on the magnetic beads can absorb negative charged molecular in order to purify nucleic acid from samples.

<u>Sample Types:</u> 200 μl serum or PBS suspension <u>Suitable Instrument:</u> SLA-16/32, SLA-E132 Series

### 2. Kit Components and Storage Conditions


REF 635A46		∑ 96 Assays
Auto Plate	6	96 well plate with reagent buffers
Elution Buffer	20 ml	Nuclease-Free Water
Proteinase K	1 ml	20 mg/ml Proteinase K, store at 4°℃
Strip	12	8-channel strip
Protocol	1	Instruction guide for user

#### Storage Conditions:

- 1. Components under room temperature (15~35  $^{\circ}$ C) can be stored until the expiration date labeled on the box.
- 2. The Proteinase K was transported at room temperature. When received, please store at  $4\,^\circ\!\mathbb{C}$  .

## Auto Plate Content

Column	Buffer Solution	Volume
1/7	Lysis Buffer	700 μl
2/8	Washing Buffer 1	800 μ1
3/9	Magnetic Beads	800 μ1
4/10	Washing Buffer 2	800 μ1
5/11	Washing Buffer 2	800 μ1
6/12	Elution Buffer	100 μ1

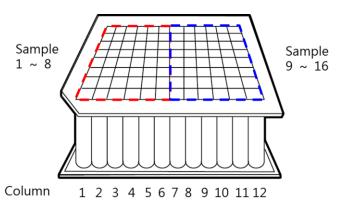

#### 3. Product Use Information

- 1) Do not use expired kits.
- 2) When room temperature is below 20  $^{\circ}$ C. Please warm the Auto Plate/Tube at 42  $\sim$  60  $^{\circ}$ C for 5  $\sim$  10 min.
- 3) Do not shake the reagent vigorously in order to avoid the excess foam formation.
- 4) Do not expose plate/tube and bottle reagent to air for a long time, to avoid evaporation and changing pH then affecting purification efficiency.
- 5) All reagents should be transparent and colorless. The existence of colors indicates that the reagent is contaminated. Please replace another plate to continue following procedure.
- 6) Before use, inspect the completeness of the Auto Plate/Tube and strips.
- Please wear a mask and disposable gloves when manipulation.
- 8) Remove the aluminum foil carefully to avoid splashing of the reagent solution.
- 9) Please use sterile consumables, and make sure that they are all nuclease free.
- 10) The procedures may not be changed.
- 11) Because the reagent buffers contain guanidine salts, it is prohibited from washing with any detergents that contain bleach.
- 12) All reagents are to avoid contact with the eyes, skin, and clothes. If any contact or splashing has occurred, rinse with abundant amount of water.

## 4. Nucleic acid extraction protocol

Before operating, turn on the warm-up system of TANBead  $^{\!0}$  Nucleic Acid Extractor, if it is equipped with temp controller, please setting at  $45\,^{\circ}\text{C}$  .

- 1) Carefully remove the aluminum foil from Auto Plate.
- Pipet 200 μl serum or PBS suspension and 10 μl Proteinase
  K into column #1/ #7 of Auto Plate.

**Note:** The volume ratio of mixture and lysis buffer is about 200  $\mu$ l: 700  $\mu$ l. If it is changed, it might be affected the performance.

- Push 96 well plate completely to the bottom of plate rack.
  Make sure that the missing corner of 96 well plate faces toward the door panel.
- 4) Push strips completely to the bottom of strip rack frame.
- 5) Close the door panel.
- 6) Select the program "VIRUS-W4-AUTO". The parameters are given in following section.
- Once the program has ended, buzzer shall alarm. Take out Auto Plate carefully.
- 8) Use micropipette to transfer the purified nucleic acid from column #6/ #12 to a clean tube.
- 9) Put the used Auto Plate and strips into the waste recovery can.

## 5. Program

Programe Name: VIRUS-W4-AUTO				Model: SLA-16/32, SLA-E132 Series					
Step	Well	Temp(℃)	Mixing (M)	Collect (S)	Rod	Mixing Speed	Volume (µl)	Pause	Vapor (M)
1	3	45	1	60	ON	Medium	800	OFF	0
2	2	45	1	0	OFF	Medium	800	OFF	0
3	1	45	20	0	OFF	Low	900	OFF	0
4	2	45	0	60	ON	Medium	800	OFF	0
5	1	45	10	60	ON	Medium	900	OFF	0
6	2	45	2	60	ON	Medium	800	OFF	0
7	3	45	2	60	ON	Medium	800	OFF	0
8	4	45	2	60	ON	Medium	800	OFF	0
9	5	45	2	60	ON	Medium	800	OFF	10
10	6	45	5	120	ON	Medium	150	OFF	0
11	5	NA	1	0	OFF	Medium	800	OFF	0
12	0	NA	0	0	OFF	Medium	0	OFF	0

## 6. Explanation of Symbols

Manufacturer	Temperature limitation	See by	$\sum_{N}$ Contains sufficient for <n> tests</n>
LOT Batch code	Consult instructions for use	REF Catalog number	IVD For in vitro diagnostic use